
AUDIO DOORPHONE SYSTEM MANUAL

1 Microphone 2 Loud Speaker 3 Pilot lamp 1 Receiver Call button Loud Speaker **OUTDOOR STATION** 2 Sender ③ Unlock button ④ Volume PHONE **Specifications** Power supply: AC 110V-240V / 50Hz-60Hz Power consumption: About 150mA in operation Operation temperature:-15°C ~+50°C Calling Tone: "Ding Dong" chime External dimension: 210 (L) ×79 (W) ×45 (H) mm

Wiring diagram

Red Black Yellow

Operation

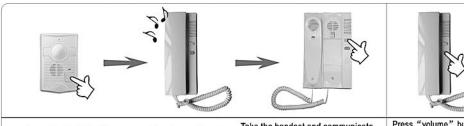


Press the "call" button on the camera by the visitor.

The phone will put out the chime.

Take the handset and communicate with the visitor, next, press "unlock" key it can open the door.



Press "volume" button, the volume increase, press "volume" button again, the volume decrease. Installation

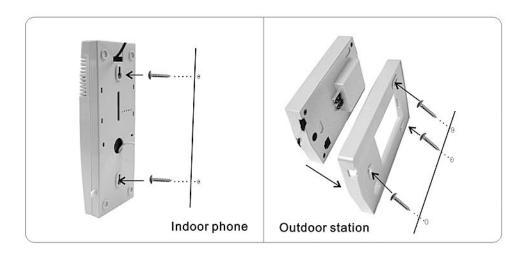

The optimum height of the indoor phone and outdoor station for installation is $145\sim160$ cm from the ground(This data provides to consult only).