



# INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT MODELS


## TO TEST

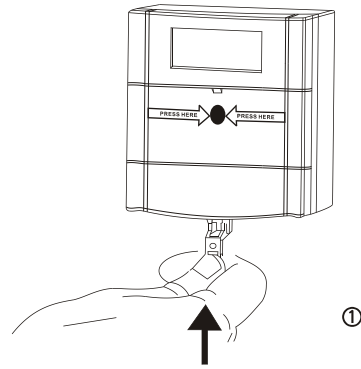

①

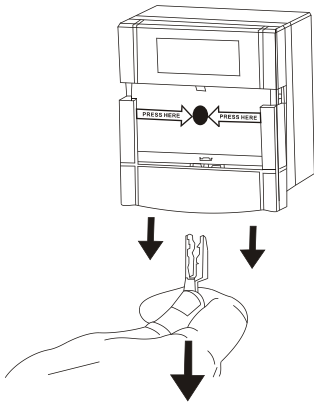


②

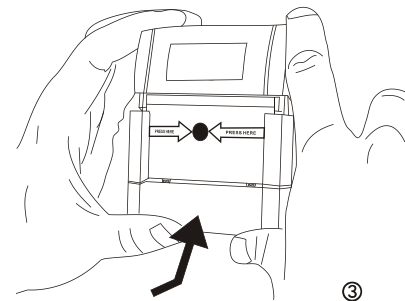


③


## TO REPLACE GLASS/RESETTABLE ELEMENT

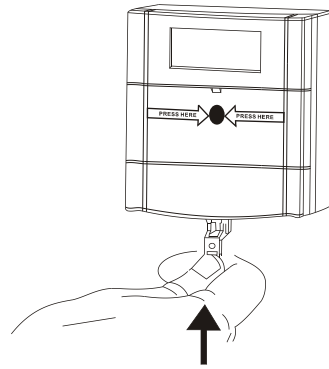


①

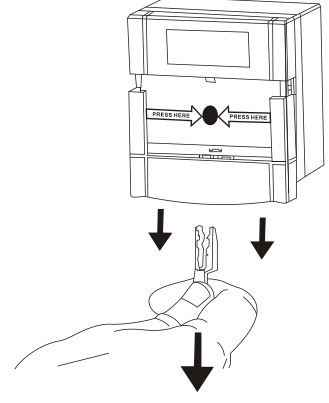


②

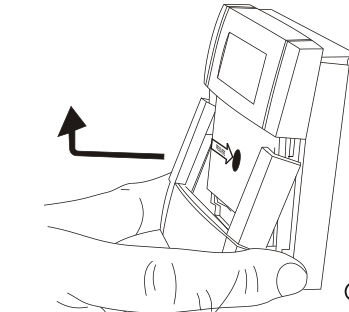


③

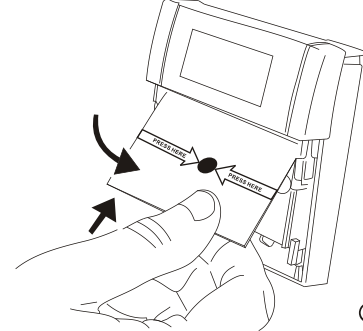

④

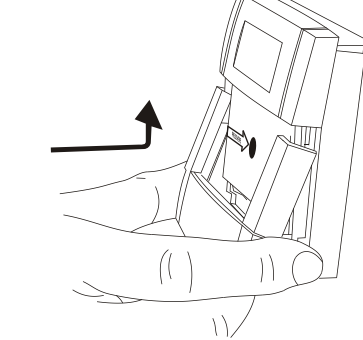


⑤

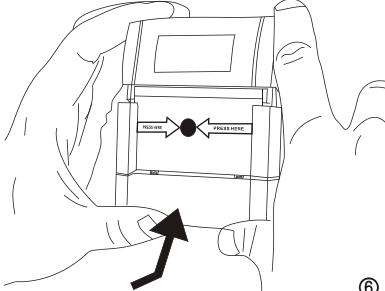


⑥


## TO RESET

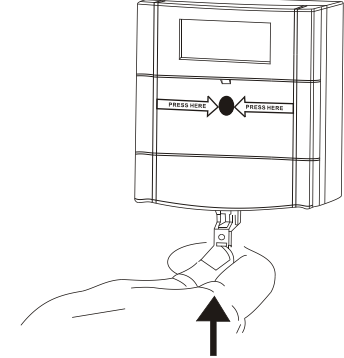

①

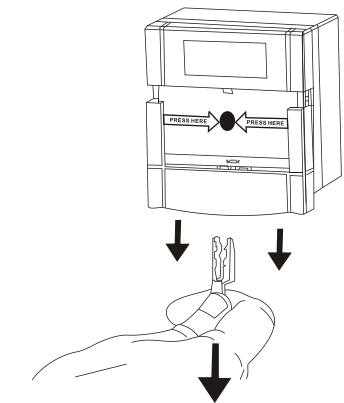

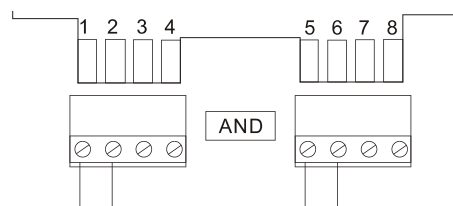
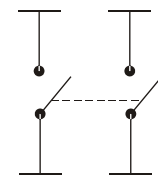



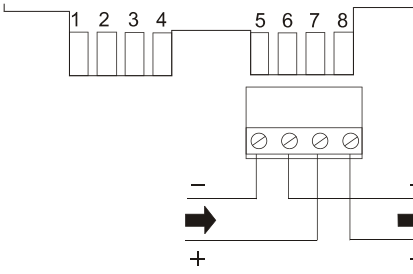

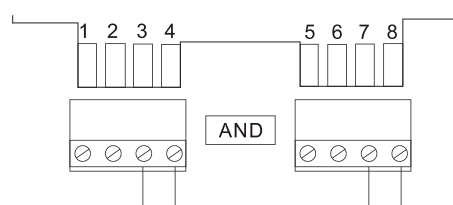
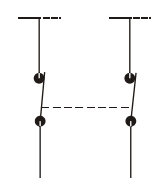


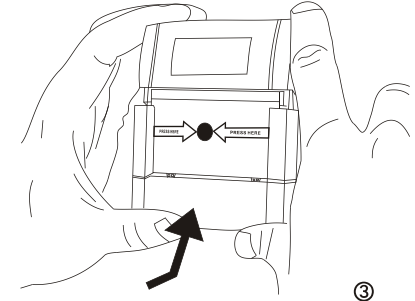


②

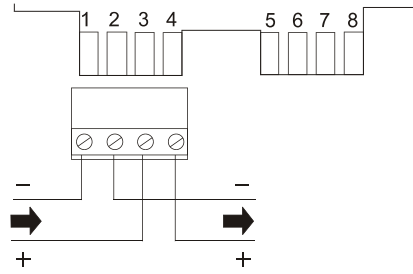

③

# INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT MODELS

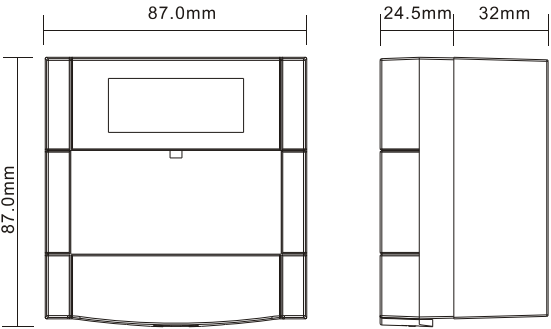CONNECTION DETAILS(①or②)	F-911(II)	CONNECTION DETAILS(①or②)	F-911(II)	TECHNICAL DATA
<p>①</p> 		<p>①</p> 		<ul style="list-style-type: none"> <li> 30VDC Max</li> <li> 2A Max</li> <li> IP24D</li> </ul>
<p>②</p> 		<p>②</p> 		<ul style="list-style-type: none"> <li> -30℃ to 70℃</li> <li> 145g</li> </ul>
DIMENSIONS	PUSH FIT CONNECTOR			
	<p>After wiring the terminal connector, plug into the appropriate position, see connection details(Left).</p> 