



Installation Guide

1. Put the installation guide paper for hole location on the door tightly as the installation guide. Then mark hole position each on the door.
2. Choose the right or the left side of the door as a proper installation location. (When the product is released from the manufacturer, it is made to install on the right side of the door.)
3. To install on the right side of the door, place and tighten the mortise lock provided on the door.
4. To install on the left side of the door, unscrew the latch bolt of the mortise, rotate the latch bolt 180° reversely, and screw the latch bolt again as shown in the figure below.

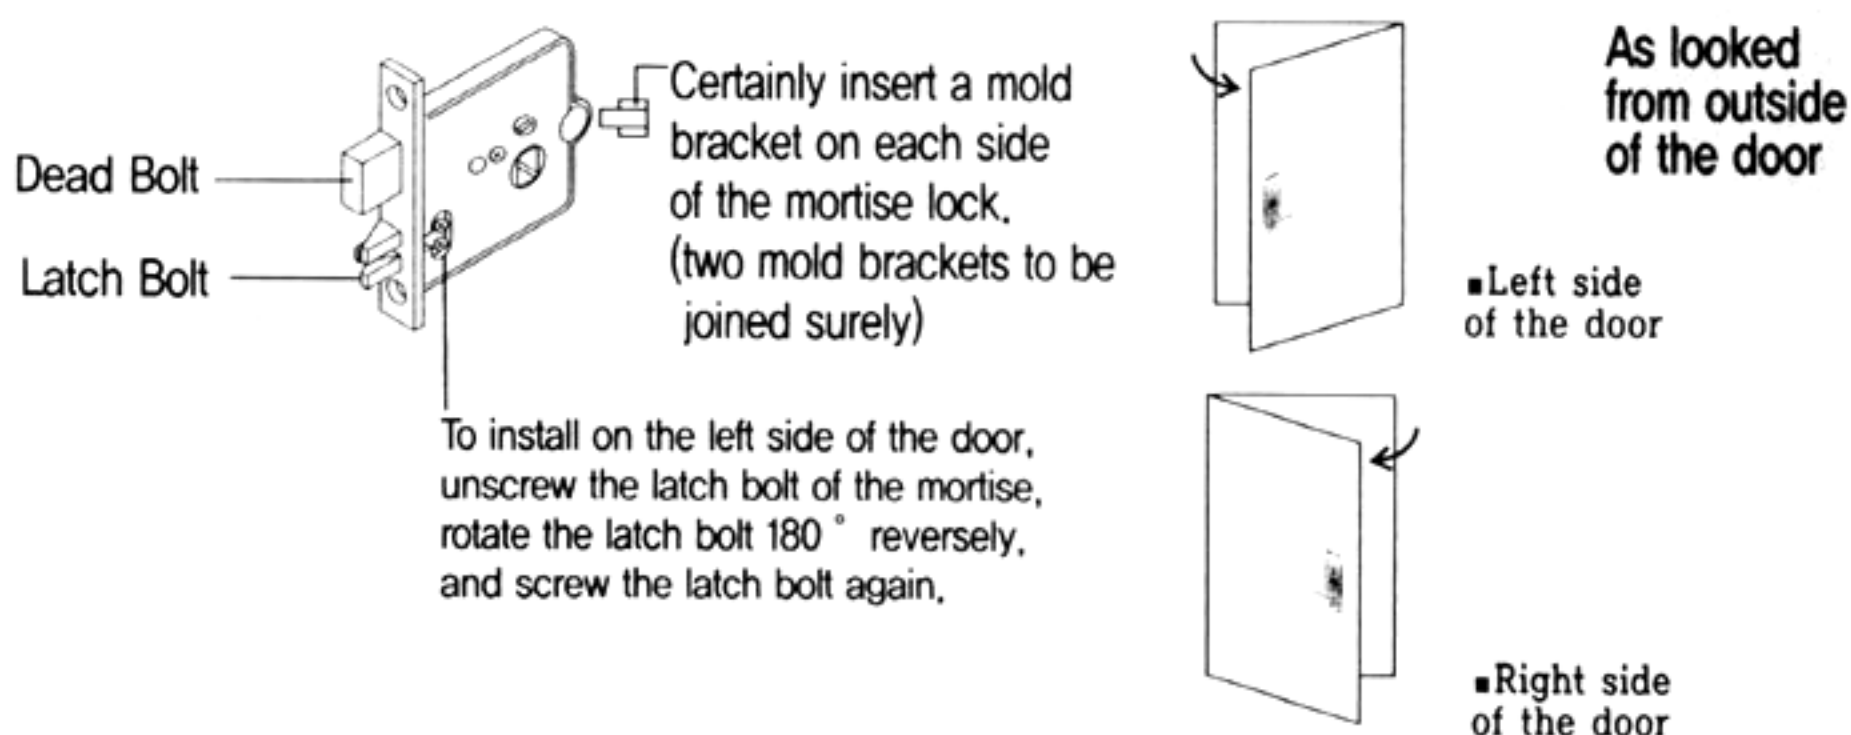

5. Through both sides of the door, please drill ϕ 10(mm) of 2 holes, a ϕ 30(mm) and a ϕ 55(mm) hole in the center of the punch hole guide as shown in the reverse side. As already installed with about ϕ 55(mm) of previous cylinder key hole, it is unnecessary to punch it.

6. Please assemble the doorlock with the bolt and parts as shown in the figure on the right. Before assembling front parts and back parts, please connect 3 cables on the right position.

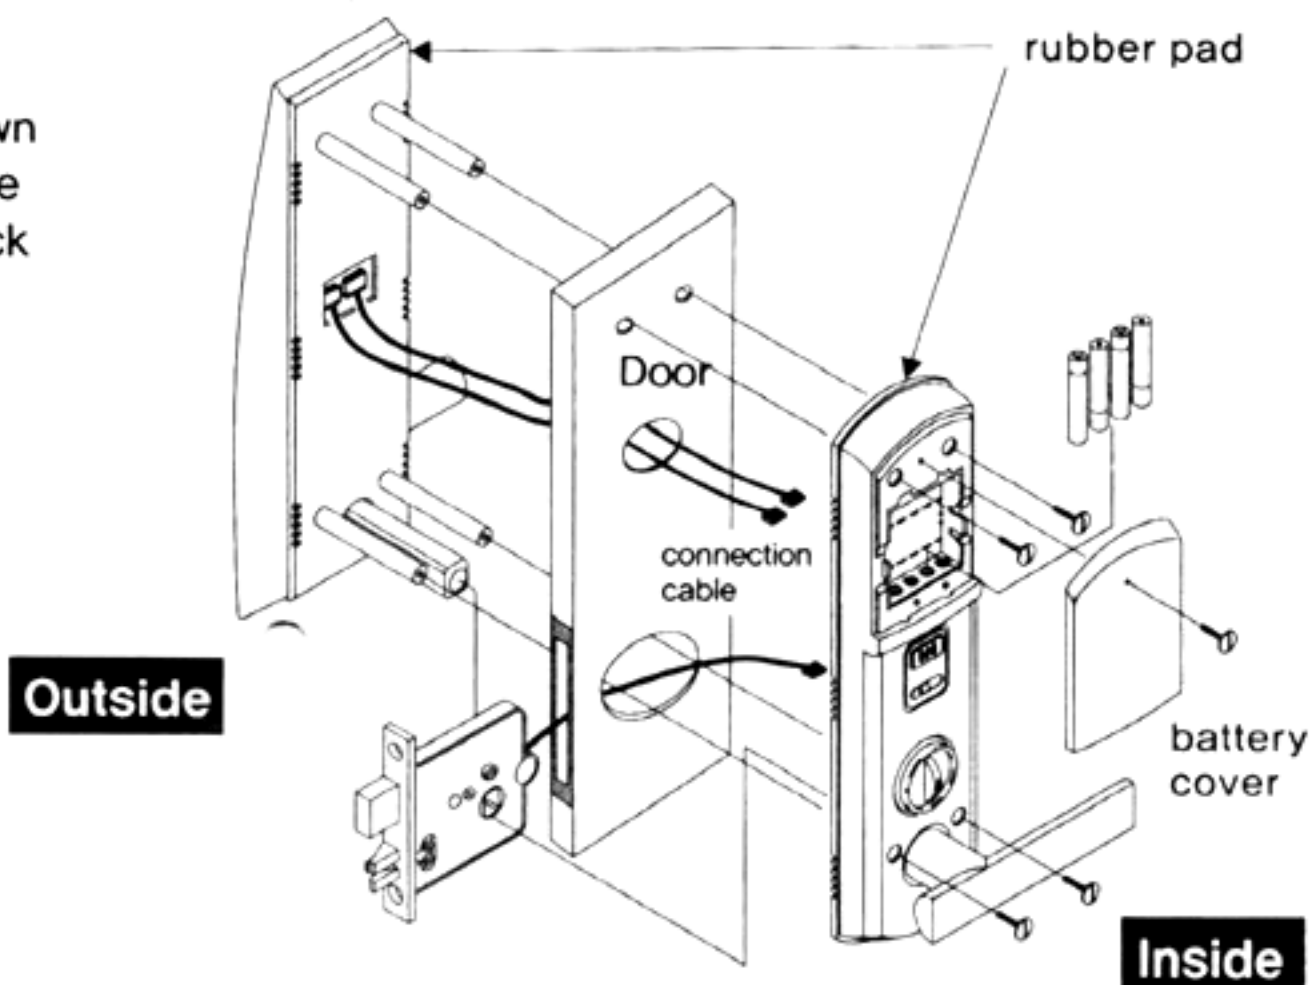

7. To confirm that the mortise lock is located properly, please check as below.
 - ◆If it is the left side of the door : Open the door → * button → password → # button → RESET button → REG button → * button → the number '1' → Push the # button
 - ◆If it is the right side of the door : Open the door → * button → password → # button → RESET button → REG button → * button → the number '3' → Push the # button